


# Ignition Switch Instructions

- 1) Disconnect Battery
- 2) Drill  $\frac{3}{4}$ " Hole In Mounting Location
- 3) Wire Circuit As Shown Below
- 4) Install Switch In Hole and Tighten Nut

**CAUTION:** Do Not Overtighten Nut - Maximum Torque Is 12 Inch Pounds

- 5) Reconnect Battery

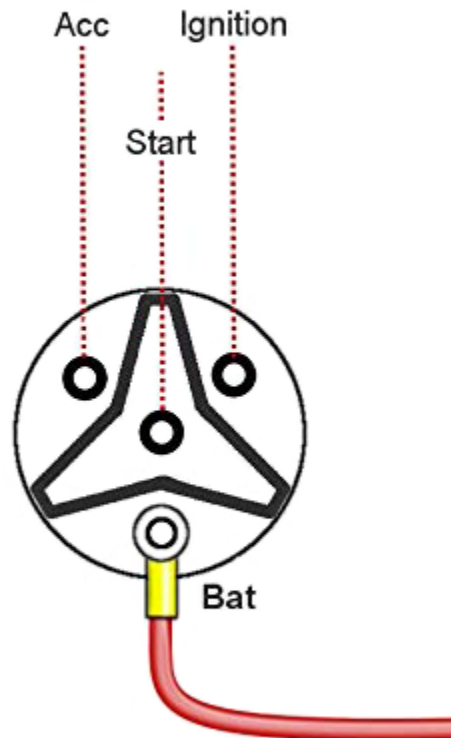

**CAUTION:** All Circuits should include an in-line fuse for safety.