


MECHANICAL THROTTLE LINKAGE KIT

PLEASE NOTE THE PICTURE FOR BASIC SETUP

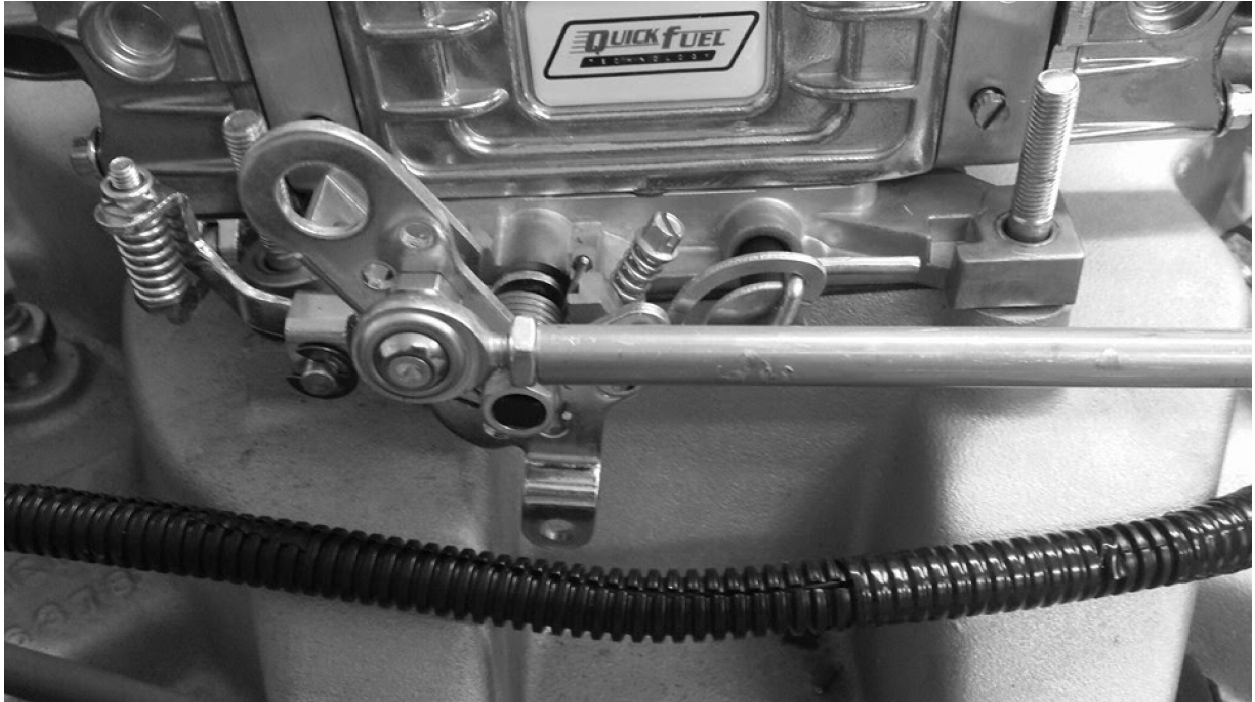

IMPORTANT!!! "MEASURE TWICE, CUT ONCE"
.. FOR BEST RESULTS, USE THE SAME METHOD
WHEN DRILLING ANY HOLES!!




ATTACH THE ROD END ON THE THROTTLE LINKAGE OF YOUR CARB. WITH THE THROTTLE ROD SQUARE TO THE FIREWALL, MARK THE FIREWALL WITH A SHARPIE THE POSITION OF THE ALUMINUM LEVER.



FIGURE THE FIREWALL ROD END POSITION AND MARK THAT POINT.

THE FOOT BOX ALUMINUM WILL NEED A 7/6" -1/2" HOLE DRILLED FOR THE SHAFT TO ENTER INTO THE FOOT BOX.

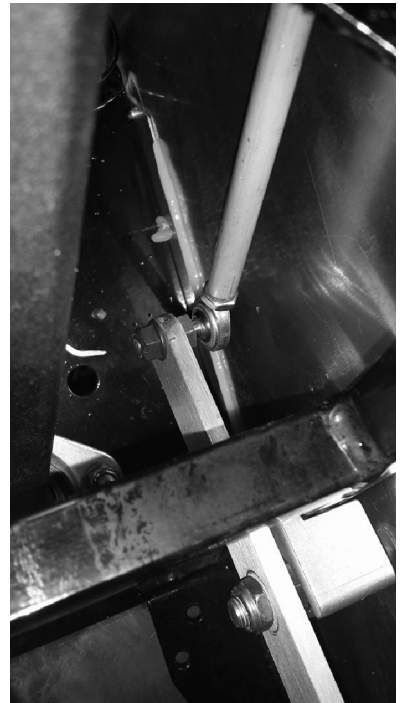

ALIGN YOUR GAS PEDAL LEVER TO WHERE THE THROTTLE LEVER WILL BE. THIS GOES OUTBOARD OF THE FIREWALL ROD END. MARK THAT POINT FOR THAT ROD END AND INSTALL ROD END TO FIREWALL.

NOTE:

LARGE WASHERS ARE INSTALLED BETWEEN THE FIREWALL ROD END AND ALUMINUM LEVER.

THE ALUMINUM LEVERS ARE SLOTTED FOR ADJUSTMENT TO SUIT YOUR LIKING.

IF YOU NEED ANY HELP PLEASE FEEL FREE TO CALL ME.

THANKS FOR YOUR SUPPORT & BUSINESS,

**MIKE FORTE
FORTE'S PARTS CONNECTION INC.
40 PEARL STREET
FRAMINGHAM, MASS. 01702
508-875-0016**